

FISHER & PAYKEL

**INTEGRATED
WINE CABINET**

RS2435V2RT1 & RS2435V2R1 models

USER GUIDE

US CA

CONTENTS

Safety and warnings	5
Product overview	9
Control panel	10
Menu	11
Using your wine cabinet	12
Wine modes	14
Light modes (glass door models only)	15
Loading suggestions	16
Adding and removing wine racks	17
Wi-Fi connection	18
Cleaning	19
Replacing the air filters	20
Accessories	21
Troubleshooting	22
Faults	24
Manufacturer's warranty and service guide	25

Registration

To register your product visit our website: fisherpaykel.com/register

⚠ WARNING!



Electric Shock Hazard

Failure to do so can result in death, electric shock, fire or injury to persons.

- Read and follow the safety and warnings outlined in this user guide before operating this appliance.

⚠ WARNING!



Tip Hazard

- This product may tip until it is fully installed. Keep children away and take care. Failure to follow this advice may result in injury.
- This appliance is top-heavy and must be secured to prevent the possibility of tipping forward.

To ensure that the appliance is stable under all loading conditions:

- The anti-tip bracket and fittings supplied must be installed by a professional installer according to the installation steps in this guide.
- This product may tip when the anti-tip bracket is unscrewed. Refer to installation instructions to safely uninstall the product.

⚠ WARNING!



This appliance contains flammable refrigerant isobutane (R600a).

SAFETY AND WARNINGS

READ AND SAVE THIS GUIDE

WARNING!

Read Safety Guide. Failure to follow all guides and rules could cause personal injury or property damage. When using this appliance, always exercise basic safety precautions including the following:

General Use

- This product has been designed for use in a normal domestic (residential) environment.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be undertaken by children without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- The manufacturer's installation instructions for product and cabinetry ventilation must be followed when installing the appliance.
- To avoid hazard due to instability of the appliance, it must be fixed in accordance with installation instructions.
- Keep ventilation openings, in the appliance enclosure or the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- In case of damage to the refrigerant circuit, ventilate the area by opening all windows.
- Do not operate electrical equipment or any other equipment that may produce arcs, sparks or flames in the area. Contact your Fisher & Paykel trained and supported service technician immediately to arrange for the appliance to be repaired.
- This refrigerating appliance is intended to be used at ambient temperatures ranging from 61°F (16°C) to 100°F (38°C). The product performance may be compromised when operating outside of this temperature range.
- WINE CABINET: For optimum performance, it is recommended to control the ambient temperature between 61°F (16°C) and 77°F (25°C).
- For storage of general household foods in the most efficient manner, it is recommended to use the product in the factory configuration supplied. Moving the shelves and bins will have a minimal impact on efficiency.
- It is hazardous for anyone other than a Fisher & Paykel trained and supported service technician to service this appliance.
- Ensure the installer has completed the final checklist in the installation guide.

Electrical

- This appliance must be installed in accordance with the installation instructions before use.
- To allow disconnection of the appliance from the supply after installation, incorporate a switch in the fixed wiring in accordance with the wiring rules.
- Never unplug your refrigerator by pulling on the power cord. Always grip the plug firmly and pull straight out from the outlet.
- Do not plug in any other appliance at the same power point as your refrigerator or use extension cords or double adapters.
- Repair or replace immediately all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion along its length or at either the plug or appliance end.

SAFETY AND WARNINGS

- If the power supply cord is damaged, it must only be replaced by your Fisher & Paykel trained and supported service technician because special purpose tools are required. When moving your appliance away from the wall, be careful not to roll over or damage the power cord.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- When positioning the appliance, ensure the power cord is not trapped or damaged.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Food safety

- Immediately clean any drips or spills on surfaces.
- If the appliance will be left empty for long periods, switch off, clean, dry, and leave the door open to prevent mould developing within the appliance.
- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.

Storage

- This appliance is intended to be used exclusively for the storage of wine.
- Do not store food and dairy products in the Wine cabinet. The internal temperature may not be cold enough to prevent spoilage in food, and the expiry dates stated on the food packaging may be invalid.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Never store volatile or flammable materials in your appliance as they may explode.

Servicing

- Your refrigerator is designed to operate for many years without the need for service checks. However, if your refrigerator is malfunctioning, have it attended to by your Fisher & Paykel trained and supported service technician as soon as possible. All electrical repairs must be carried out by an adequately trained service technician or qualified electrician.
- The LED light cannot be serviced by the user. Contact your Fisher & Paykel Dealer or Fisher & Paykel trained and supported service technician.
- If you suspect that the product is not getting cold—items such as ice cream are melting—remove all perishable food and store in another appliance or cooler to prevent spoilage. Immediately call for a service technician.

Cleaning

- Use mild dish-washing liquid with warm water and a lint-free cloth to clean the product.
- Avoid using anti-bacterial cleaning products on either the interior or exterior of the cabinet as they may cause rusting of metal components and cracking of plastic components.
- GLASS DOOR: Use only mild liquid detergent dissolved in warm water and a soft cloth. Rinse with clean water and dry with a clean, lint-free cloth.

Disposal

- Extreme care must be taken when disposing of your old appliance to avoid hazards:
- The flammable refrigerant gas must be safely removed by a qualified service technician.
- The thermal insulation foam in this appliance may contain flammable insulation blowing gases, any exposed foam may be highly flammable and must be carefully treated

SAFETY AND WARNINGS

during disposal.

- **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer, the doors and panels should be removed and the racks left in place so that children may not easily climb inside.
- Consult your local energy authority or local codes as to the best way to dispose of your old appliance.
- Remove all packaging and dispose of it responsibly. Recycle items that you can.

Power failure

- In the event of a power interruption, the appliance will automatically save the current temperature settings. When power is recovered, the appliance will revert to the current temperature settings only.
- Most power failures are corrected within a short period of time. 1–2 hours loss of power will not affect the appliance's temperatures.
- To avoid sudden change of temperature while the power is off, you should avoid opening the door. A refrigerator will keep food safe for up to 4 hours during a power outage. Keep the door closed as much as possible. Discard refrigerated perishable food such as meat, poultry, fish, eggs, and leftovers after 4 hours without power.

IMPORTANT!

This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.
- Do not change or modify the wireless communication device in any way. Changes or modifications not expressly approved by Fisher & Paykel could void the user's authority to operate the equipment.

WARNING: The incorporated Wi-Fi module in this appliance is to operate only from channel 1 to channel 11 as per FCC rules.

This device contains licence-exempt transmitter/receiver that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

PRODUCT OVERVIEW




RS2435V2R illustrated with door panel and toe kick (not supplied).

Features


- ① Control panel
- ② Upper zone
- ③ Lower zone
- ④ Wine racks
- ⑤ Air filters
- ⑥ Lighting

CONTROL PANEL

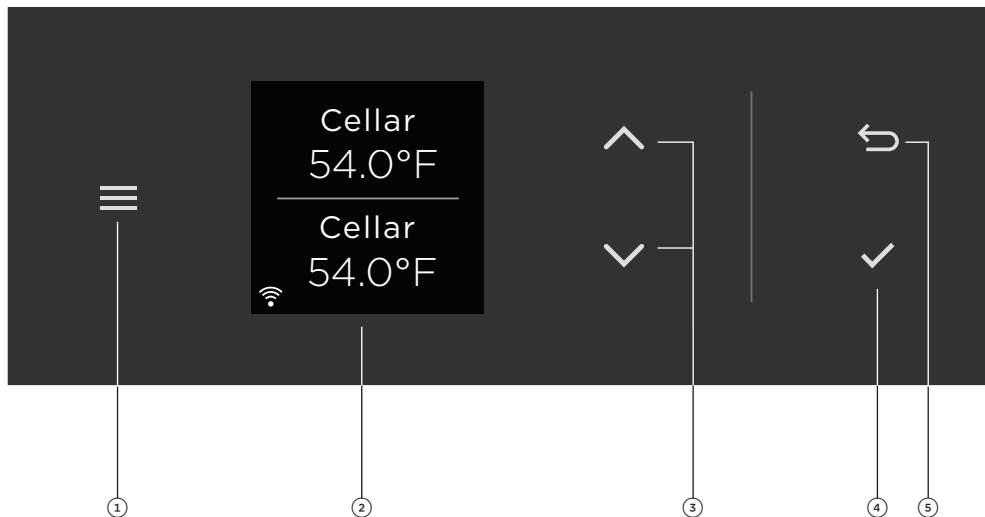

① Menu	Press to access product features and settings, or to return to standby. If the display has been locked, hold for two seconds to unlock.
② Display screen	Displays product features and settings.
③ Scroll	Press to select wine modes and adjust temperatures. Enables you to scroll through the menu, features and settings.
④ Select	Press to confirm and activate the selected features and settings.
⑤ Back	Press to go back to the previous menu.

MENU

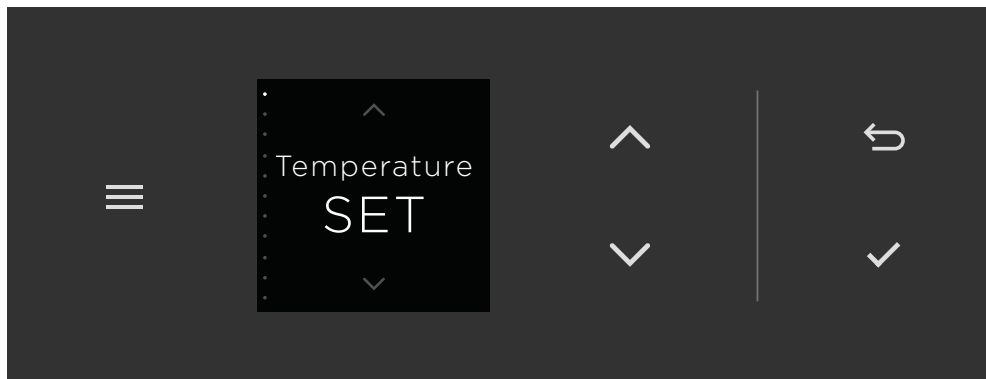


TEMPERATURE	Adjust the temperature for the selected zone.
WINE MODES	Select a wine storage mode. Refer to 'Wine Modes'.
LIGHT MODES	Adjust the lighting brightness to suit your preferences (glass door models only).
ALARM MUTE	Mute the door alarm for 20 minutes or until the door is closed again.
DISPLAY LOCK	Lock the controls to prevent accidental use.
SABBATH MODE	For the Sabbath observant. In Sabbath Mode alarms, lights and the display will be deactivated for 80 hours. <ul style="list-style-type: none">• The lights will not turn on when you open the door.• The door alarm will not operate.• The display will not illuminate.• The display will be unresponsive.
SETTINGS	Adjust the appliance settings to suit your preferences or set up a Wi-Fi connection. Refer to 'Wi-Fi connection and remote mode'.

USING YOUR WINE CABINET


Select a wine mode and temperature that suits the wine you will be storing. See 'Wine Modes' for storage recommendations.




Adjust the settings as needed to suit your preferences.

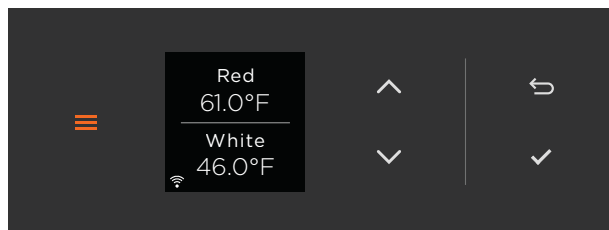
Accessing the menu



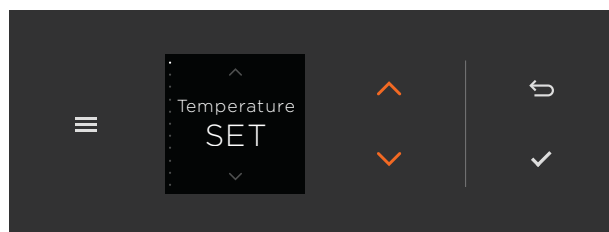


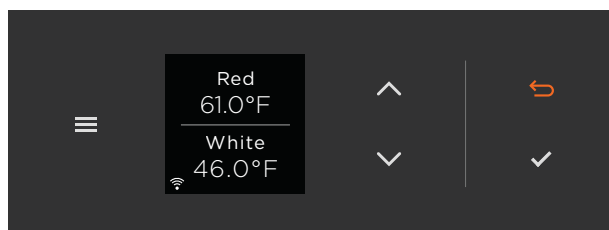
1. Press  to access the menu.

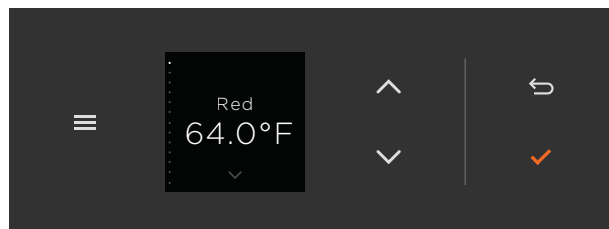


2. Press  or  to scroll through the menu, then press  to select a feature.




3. Press  or  to adjust as needed, then press  to confirm your selection.






4. Press  at any point to exit the menu.

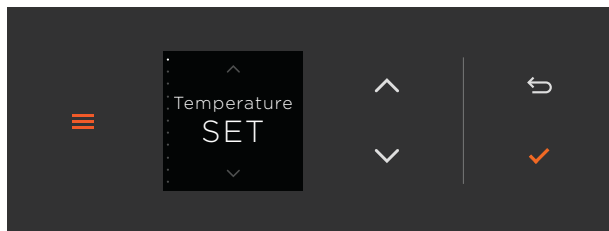


USING YOUR WINE CABINET


Selecting and adjusting wine modes and temperature



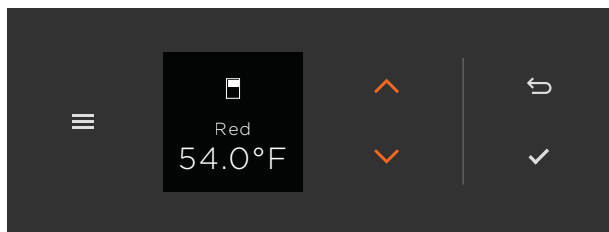


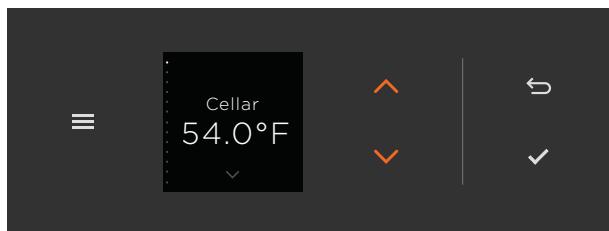
1. Press  to access **TEMPERATURE SET**. Press  to confirm.



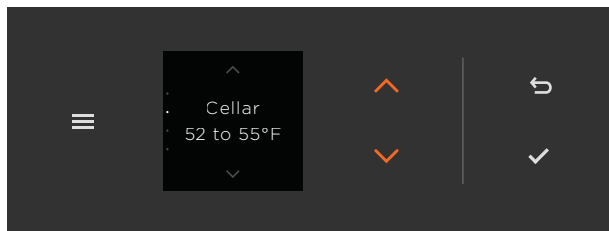


2. Press  or  to select a compartment. Press  to confirm.





3. Press  or  to scroll to desired mode, then press  to select.

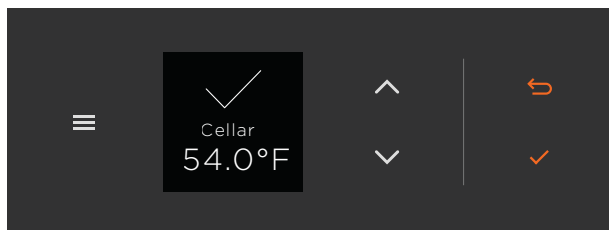

4. Press  or  to adjust the temperature.



5. Press  to confirm and  to exit the menu.

WINE MODES

Wine modes give you control over the temperature in each compartment to best care for your wine and provide the ideal serving temperature for all wine varieties.

The modes are set to recommended temperatures, but you can set different temperatures as desired.

Not all wines will improve over time. Check with your wine merchant for more information regarding the best storage conditions for your wine.

WINE MODE		TYPES OF WINE TO STORE
RED (16°C/61°F)	For short-term storage of light, fruity and full-bodied reds at serving temperature.	Pinot Noir, Merlot, Malbec, Shiraz/Syrah, Chianti, Cabernet Sauvignon, Vintage Port.
CELLAR (12°C/54°F)	For longer-term storage of all wine varieties, 'Cellar Mode' provides conditions suitable for aging wines.	All varieties.
WHITE (8°C/46°F)	For short-term storage of aromatic white wines and Rosé at serving temperature.	Sauvignon Blanc, Chardonnay, Riesling, Pinot Gris, Viognier, Chablis, Gewürztraminer, Rosé.
SPARKLING (7°C/45°F)	For short-term storage of all sparkling wines at serving temperature.	Sparkling wines (eg Méthode Champenoise, Metodo Classico) Champagne, Cava, Prosecco.

LIGHT MODES (GLASS DOOR MODELS ONLY)

Light modes let you select the illumination level of bottles and the surrounding environment. Light mode will default to **LOW** after 3 hours to ensure the best wine care.

LIGHT MODE

OFF	Select OFF to turn off all compartment lights. Best mode for long-term storage.
LOW	Dimmest setting available. Softly illuminates the interior of your wine cabinet while allowing it to blend into the surrounding environment.
MEDIUM	Medium illumination subtly highlights your wine collection.
HIGH	Turns all compartment lights to full brightness to showcase your wine collection.

LOADING SUGGESTIONS

This product is designed to store up to 35 standard 750ml bottles. Remove shelves if needed to make space for larger bottles or magnums. Sparkling wine may fit best on the lower shelves of each compartment.

For best results, do not overfill the racks or exceed the overall capacity of the product.



Bottles of the same size can be placed in alternating directions on each shelf.



Racks can be removed to store magnums and larger wine bottles.

ADDING AND REMOVING WINE RACKS



1. Pull the rack towards you and locate the pins at the base of the corners.



2. Lift the rear of the rack to free the rear pins, then pull the rack towards you to separate the front pins from the slide support so you can remove the rack.



3. To refit, push the front pins into the slide support and lower the rack until the rear pins lock into place.

WI-FI CONNECTION

Your appliance may be connected to your home wireless network and operated remotely using the app.


Getting started




- Ensure your home Wi-Fi network and Bluetooth on your mobile device are turned on.
- You will be given step-by-step guidance on mobile device.
- It may take up to 10 minutes to connect your appliance.

On your mobile device:


- ① Download the app from www.fisherpaykel.com/connect
- ② Register and create an account.
- ③ Add your appliance and set up the Wi-Fi connection.

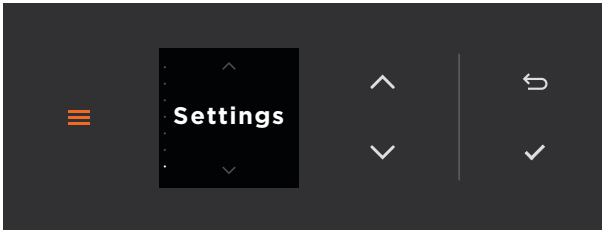

Connecting to Wi-Fi




1. Press  to access the menu, then  or  to scroll to **SETTINGS**.

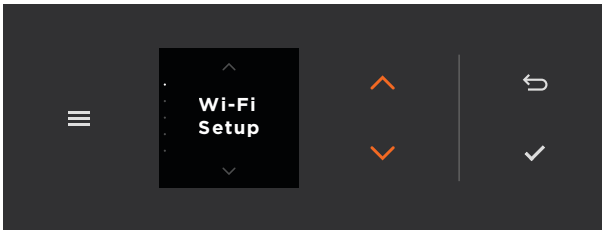Press  to select.



2. Press  or  to scroll to **WI-FI SETUP**.

Press  to select.

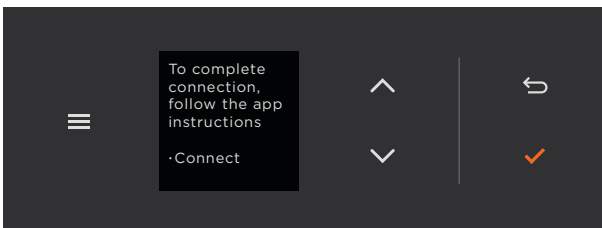

3. Follow the prompts on the display and in the app to complete setup.

CLEANING

Surfaces

Remove racks, then wipe interior surfaces with a damp cloth and mild detergent. Dry with a clean, lint-free cloth. Use a small brush to clean difficult to reach spots if needed.

We do not recommend using the following cleaning products as they may cause damage:

- Plastic or stainless steel scouring pads
- Abrasive, solvent, household cleaners
- Acid or alkaline cleaners
- Hand washing liquids or soap
- Stainless steel cleaners or polishes
- Laundry detergents or disinfectants

Glass door

Use only mild liquid detergent dissolved in warm water and a soft cloth. Rinse with clean water and dry with a clean, lint-free cloth.

Door seal

Use a small brush to clean around the door seal as needed.

Wooden wine racks

Clean wine spills immediately to prevent staining. Stains can be spot cleaned with a damp cloth and mild detergent.

Take care to keep the wood as dry as possible. Do not use water or cleaners for day-to-day cleaning.

Lower grille


Clean regularly to keep dust-free.

REPLACING THE AIR FILTERS

Your product comes with activated carbon air filters to keep each compartment free of odors. Replace the carbon air filters every 6 months to maintain optimal performance. An alert will show in the display when the filters need to be replaced. To reset the alert, go to settings.

Replacing the air filters

The air filters are located behind the top rack of each compartment. Remove the racks to access the filters.

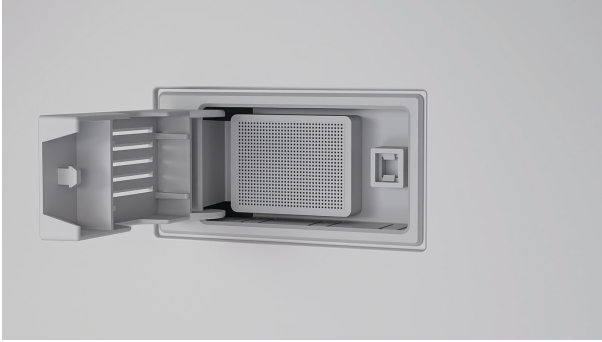

1. Push the filter cover to open.



2. Remove the old filter and replace with a new one.



3. Push the filter cover to close.

ACCESSORIES

Cooling accessories are available to purchase from www.fisherpaykel.com. Go to the website and search by product or accessory reference.

Item	Reference
Air filter for Integrated Wine (2-pack)	FILTER ODOUR WINE KIT
Bottle label kit for Integrated Wine	ALV14

TROUBLESHOOTING

General use

Why will the product not turn on?

- No power. Make sure the product is connected to the power supply and switched on at the wall.
 - Check the circuit breaker, or check if there is a power cut in your home or area. If the product still won't turn on, call Customer Care or your Authorized Service Centre.
-

Why is the display not working?

- The product may be in Sabbath Mode. Press and hold  to exit this mode.
-

Why is the light not working?

- Light mode is switched off. (Glass door models only.) See 'Accessing the menu' and 'Light modes'.
 - Product is not switched on. Check it is turned on at the wall or the isolating switch.
 - Light needs to be replaced. Call Customer Care or your Authorized Service Centre.
-

Why is the product beeping and displaying a code when I open the door?

- There is a fault. Record the code on the display, and call Customer Care or your Authorized Service Centre.
-

Why are the storage compartments too warm?

- Temperature setting not correct. See 'Selecting and adjusting wine modes and temperature.'
 - Frequent door openings. Minimise door openings to allow temperature to stabilise.
 - Large amount of wine has been recently added. Keep recommended bottle capacity.
-

Why is the product making unfamiliar noises?

- Product is not stable or level. Check Installation guide at www.fisherpaykel.com or call Customer Care or your Authorized Service Centre.
-

Why is the product warm on the outside?

- This is normal.
-

Why is there condensation on the outside of the product?

- This is not unusual during periods of high humidity. Wipe dry with a lint-free cloth.
-

TROUBLESHOOTING

Why is the door not closing?

- Items in product are preventing door from closing tightly. Rearrange items so door can close.
 - Product is not installed correctly. Check Installation guide at www.fisherpaykel.com or call Customer Care or your Authorized Service Centre.
-

Why is there condensation inside the product?

- Frequent or long door openings. Minimize door openings.
 - Door seal is leaking. Check and clean door seal. See 'Cleaning.'
 - This is not unusual during periods of high humidity. Wipe dry with a lint-free cloth.
 - Items in product preventing door from closing tightly. Rearrange items so door can close tightly.
 - Doors not aligned. Call Customer Care or your Authorized Service Centre.
-

FAULTS

If a fault occurs, there will be 4 rapid beeps and the fault will be displayed on the control panel.

Record the fault code and contact a Fisher & Paykel trained and supported service technician in order to repair the fault. You can do this by going online to fisherpaykel.com or by contacting our Customer Care Centre.

Normal appliance sounds

This product has been designed to have excellent energy ratings and cooling performance. As a result, it can produce sounds somewhat different to your old appliance.

Low frequency ticking	This is the valve that controls cooling to each compartment. This noise will only last for a few seconds at a time.
Fan air flow	This product has fans which change speed depending on demand. During cooling periods, such as after frequent door openings, fans circulate the cold air in the appliance producing some air-flow sound. This is quite normal.
Cracking or popping	This may occur when the automatic defrost function is operating.
Running water	This is the liquid refrigerant in the system and can be heard as a boiling or gurgling noise.
Hissing sound after closing the door	This is due to the pressure difference between the warm air that has entered the product, and suddenly cooled, and the outside air pressure.
Humming	This is the compressor running and is quite normal.
Other sounds	Product not stable or level. Bottles rattling on shelves.

MANUFACTURER'S WARRANTY AND SERVICE GUIDE

US



To access your Warranty and Service Guide

Scan the QR code with your smartphone to access your warranty and book a service, refer to your separate warranty and service book or view online at <https://www.fisherpaykel.com/us/help-and-support/warranty-information>

CA



To access your Warranty and Service Guide

Scan the QR code with your smartphone to access your warranty and book a service, refer to your separate warranty and service book or view online at <https://www.fisherpaykel.com/ca/help-and-support/warranty-information>

This product has been designed for use in a domestic (residential) environment. This product is not designed for any commercial use. Any commercial use by the customer will affect this product's Manufacturer's Warranty.

Complete and keep for safe reference:

Model _____

Serial No. _____

Purchase Date _____

Purchaser _____

Dealer _____

City _____

State _____

Zip _____

Country _____

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2024. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and
models described at the date of issue. Under our policy of continuous product
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

431793A 05.24