0 O Θ 0 0 **PLAN VIEW** 0 **B** 23 7/16" **3** 21 7/16 0 0 0 0 • 0 **A** 23 9/16 DATUM : BOTTOM OF CHASSIS 0 FRONT VIEW PROFILE VIEW 0

FISHER & PAYKEL

DATA SHEET Oven, 24"

Model no:

OB24SD11PLX1, OB24SD16PLX1

(refer page 2 for metric measurements)

Product Dimensions	
Overall height of oven	23 9/16"
Overall width of oven	23 7/16"
© Depth of front frame (excludes dial, handle and front stainless trim)	13/16"
Depth of oven chassis and front frame (excludes dial, handle and front stainless trim)	22 1/4"
© Depth of chassis	21 7/16"
F Height of chassis	22 5/8"
Width of chassis	21 7/8"
Height from bottom datum to top of oven door	19 13/16"
Height from bottom datum to bottom of door	1/2"
Height of control panel	3 15/16"
Height of stainless steel cap on control panel	13/16"
© Height from bottom datum to centerline of handle	18 1/4"
Width of handle	22 1/4"
N Depth of handle (measured from front of door)	15/8"
⊙ Thickness of handle	5/8"
Depth of door when open (measured from front of door)	18 1/8"

Minimum Clearances	in
Minimum inside height of cavity	22 13/16"
Minimum inside width of cavity	22 1/6"
Minimum inside depth of cavity	21 5/8"

 $\label{lem:main_eq} \mbox{IMPORTANT NOTE: For full installation and clearance details please refer to the installation guide.}$

INDICATES PRODUCT DATUM -----INDICATES CABINETRY CLEARANCES ------

DATE: 08.08.2022

IMPORTANT NOTE: Throughout this guide, dimensions may vary by £2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com

0 0 Θ 0 0 **PLAN VIEW** 0 **B** 596 **3** 545 0 О 0 0 • 0 **A** 598 DATUM : BOTTOM OF CHASSIS 0 FRONT VIEW PROFILE VIEW 0

FISHER & PAYKEL

DATA SHEET Oven, 24"

Model no:

OB24SD11PLX1, OB24SD16PLX1

(refer page 1 for imperial measurements)

Product Dimensions	
Overall height of oven	598
Overall width of oven	596
© Depth of front frame (excludes dial, handle and front stainless trim)	20
Depth of oven chassis and front frame (excludes dial, handle and front stainless trim)	56
© Depth of chassis	54
F Height of chassis	57
© Width of chassis	55
Height from bottom datum to top of oven door	48
① Height from bottom datum to bottom of door	1:
Height of control panel	100
Height of stainless steel cap on control panel	20
© Height from bottom datum to centerline of handle	464
Width of handle ■ Width of hand	56
Depth of handle (measured from front of door)	4.
① Thickness of handle	16
Depth of door when open (measured from front of door)	460

mm
580
560
550

 $\label{lem:main_model} \mbox{IMPORTANT NOTE: For full installation and clearance details please refer to the installation guide.}$

INDICATES PRODUCT DATUM -----INDICATES CABINETRY CLEARANCES ------

DATE: 08.08.2022

IMPORTANT NOTE: Throughout this guide, dimensions may vary by £2mm (1/16"). Please read the installation manual for detailed information on installing the product. For full installation instructions & specifications visit fisherpaykel.com