

WASH PROGRAM DATA

Wash program times and temperatures indicated are approximate. For information on which program to use for your load, refer to your user guide.

DD24DI9, DD24DHTI9, DD24DTI9, DD24DT4NX9 (Double) models

CYCLE	WASH PROGRAM (CYCLE TIME)					
	HEAVY (155min)	MEDIUM (150min)	ECO* (120min)	FAST (45min)	DELICATE (125min)	RINSE (15min)
Pre wash	n/a	n/a	n/a	n/a	n/a	n/a
Main wash	149°F	131°F	113°F	118°F	122°F	n/a
Post rinse	Yes (x2)	Yes (x2)	Yes	Yes	Yes (x2)	n/a
Final rinse	140°F	140°F	129°F	118°F	122°F	n/a
Drying phase	Yes	Yes	Yes	Yes	Yes	n/a

DD24SI9, DD24STI9, DD24SHTI9, DD24ST4NX9 (Single) models

CYCLE	WASH PROGRAM (CYCLE TIME)					
	HEAVY (190min)	MEDIUM (185min)	ECO* (152min)	FAST (45min)	DELICATE (155min)	RINSE (15min)
Pre wash	n/a	n/a	n/a	n/a	n/a	n/a
Main wash	149°F	131°F	113°F	118°F	122°F	n/a
Post rinse	Yes (x2)	Yes (x2)	Yes	Yes	Yes (x2)	n/a
Final rinse	140°F	140°F	129°F	118°F	122°F	n/a
Drying phase	Yes	Yes	Yes	Yes	Yes	n/a

*Reference program for energy/water label in compliance with 10 CFR part 430 and CAN/CSA-C373 Regulations.

Wash times can vary depending on the incoming water temperature, ambient conditions, type of dish load and whether the drawer has been opened during the wash. Wash times are only APPROXIMATE on the electronic display (where applicable) and based on 120°F (USA and Canada), incoming water.

STANDARDS TEST (SINGLE MODELS)

The DishDrawer™ Dishwashers are non-soil sensing dishwashers tested to 10 CFR part 430 and CAN/CSA-C373 for energy and water consumption using the parameters detailed below.

Wash program

Eco*

Detergent quantity

For 7 place setting energy and water consumption

- 6.3g added to the main powdered detergent dispenser.

For compact cleaning performance

- 3.6g added to the main powdered detergent dispenser.

Capacity

7 place settings per drawer

Accessories


Base rack, folding tines, fixed plate rack, cutlery basket with cutlery grid, fold away cup racks and glass supports.

Height setting of cup racks

Adjust the height to a position clear of other load items.

Note: Ensure the product is level and has the correct drain hose height. Refer to 'Installation Guide' for details.



Correct orientation of glass supports on side of drawer

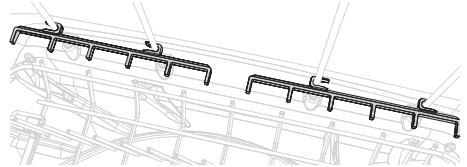

Recommended loading pattern**



Cutlery basket

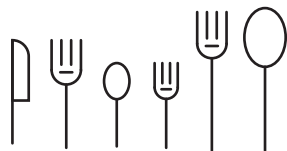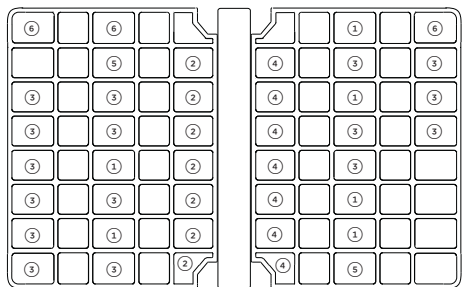

① ② ③ ④ ⑤ ⑥

*A fan will run for 20 minutes at the end of the Eco program.

**Compact product

STANDARDS TEST (DOUBLE MODELS)

The DishDrawer™ Dishwashers are tested to 10 CFR part 430 and CAN/CSA-C373 for energy and water consumption using the parameters detailed below.

Wash program

Eco*

Capacity

14 place settings

Accessories


Base rack, folding tines, fixed plate rack, cutlery basket with cutlery grid, fold away cup racks and glass supports.

*A fan will run for 20 minutes at the end of the Eco program.

Height setting of cup racks

Adjust the height to a position clear of other load items.



Correct orientation of glass supports on side of drawer

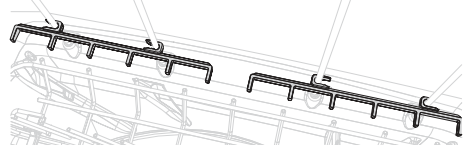

Recommended loading: Top drawer





Cutlery basket

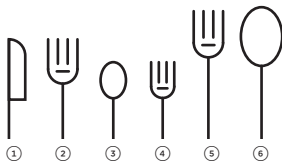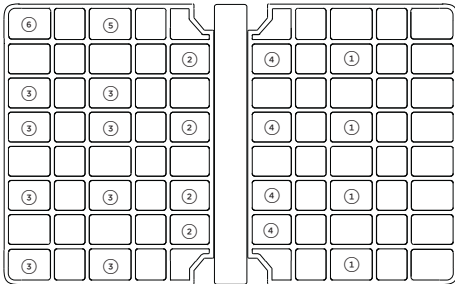

Recommended loading: Bottom drawer



Cutlery basket

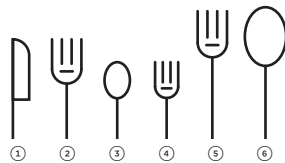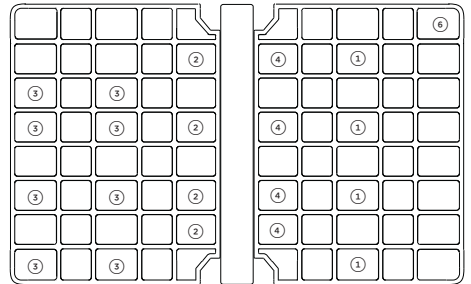

Note: Ensure the product is level and has the correct drain hose height. Refer to 'Installation Guide' for details.