

FISHER & PAYKEL

**INTEGRATED
BEVERAGE CENTRE**

RS6009SBLT1 & RS6009SBL1 models

USER GUIDE

CN

CONTENTS

Safety and warnings	5
Product overview	9
Control panel	10
Menu	11
Using your beverage centre	12
Adjusting your beverage centre	14
Modes	16
Storage recommendations	17
Cleaning	18
Troubleshooting	19
Faults	21
Manufacturer's warranty and service guide	22
Hazardous substances declaration	23

⚠ WARNING!



Electric Shock Hazard

Failure to do so can result in death, electric shock, fire or injury to persons.

- Read and follow the safety and warnings outlined in this user guide before operating this appliance.

⚠ WARNING!



Tip Hazard

- This product may tip until it is fully installed. Keep children away and take care. Failure to follow this advice may result in injury.
- This appliance is top-heavy and must be secured to prevent the possibility of tipping forward.

To ensure that the appliance is stable under all loading conditions:

- The anti-tip bracket and fittings supplied must be installed by a professional installer according to the installation steps in this guide.
- This product may tip when the anti-tip bracket is unscrewed. Refer to installation instructions to safely uninstall the product.

⚠ WARNING!



This appliance contains flammable refrigerant isobutane (R600a).

SAFETY AND WARNINGS

READ AND SAVE THIS GUIDE

WARNING!

Read Safety Guide. Failure to follow all guides and rules could cause personal injury or property damage. When using this appliance, always exercise basic safety precautions including the following:

Use this appliance only for the intended purpose as described in the user guide and installation guide of this appliance.

General

- This appliance is designed for use in a normal domestic (residential) environment.
- Children should be supervised to ensure that they do not play with the appliance.
- Children aged 3 to 8 years may load and unload this appliance under supervision.
- Cleaning and user maintenance shall not be undertaken by children without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- The manufacturer's installation instructions for appliance and cabinetry ventilation must be followed when installing the appliance.
- To avoid hazard due to instability of the appliance, it must be fixed in accordance with installation guide.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit. In case of damage to the refrigerant circuit, ventilate the area by opening all windows.
- It is hazardous for anyone other than a Fisher & Paykel trained and supported service technician to service this appliance.
- It is hazardous for anyone other than an Authorised Service Person to service this appliance. In Queensland - the authorized Service Person MUST hold a Gas Work Authorisation for hydrocarbon refrigerants, to carry out Servicing or repairs which involve the removal of covers.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Never store volatile or flammable materials in your appliance as they may explode.
- Opening the door for long periods of time can cause a significant increase of the temperature in the compartments of the appliance.

Installation

- Ensure that the appliance is secured to prevent tipping forward. Tipping of appliance can lead to serious injury or death.

SAFETY AND WARNINGS

Electrical

- Do not plug in any other appliance at the same power point as your appliance or use extension cords or double adapters.
- When moving your appliance away from the wall, be careful not to roll over or damage the power cord.
- When positioning the appliance, ensure the power cord is not trapped or damaged. If the power cord is damaged, it must only be replaced by your Fisher & Paykel trained and supported service technician.
- Do not operate electrical equipment or any other equipment that may produce arcs, sparks or flames in the area. Contact your Fisher & Paykel trained and supported service technician immediately to arrange for the appliance to be repaired.
- Do not use electrical appliances inside the storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Temperature control

- This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C. The appliance performance may be compromised when operating outside of the temperature range.
- Once you turn on your appliance for the first time, the cooling system will automatically cool all compartments to their set temperatures. This will take between 2 - 3 hours.
- The control panel enables you to change and control the temperatures of the compartments accurately and independently regardless of the temperature or humidity of the surroundings whether it is summer or winter.
- We recommend checking the operation of your appliance once every 4 hours for the first 24 hours.
- If at any time you notice that the appliance is not cooling properly, call your installer or Fisher & Paykel trained and supported service technician to verify if the unit is operating properly.

Servicing

- All electrical repairs must be carried out by an adequately trained service technician or qualified electrician.
- Electrical shock hazard. Assume all parts are live.
- Disconnect supply before servicing and installation.
- The LED light cannot be serviced by the user. Contact your Fisher & Paykel Dealer or Fisher & Paykel trained and supported service technician.
- For spare parts, please contact Fisher & Paykel Customer Care. Spare parts are available for all Fisher & Paykel appliances for a minimum period of 10 years from the date of manufacture.

IMPORTANT!

Your appliance is designed to operate for many years without the need for service checks. However, if your appliance is malfunctioning, have it attended to by your Fisher & Paykel trained and supported service technician as soon as possible.

SAFETY AND WARNINGS

Cleaning

- If the appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- Use only soap-based cleaning products. Many commercially available cleaning products contain solvents that may degrade the plastic components of your refrigerator and cause them to crack.
- Avoid using anti-bacterial cleaning products on either the interior or exterior of the cabinet as they may cause rusting of metal components and cracking of plastic components.
- Regularly clean accessible draining systems and surfaces.
- GLASS DOOR: Use only mild liquid detergent dissolved in warm water and a soft cloth. Rinse with clean water and dry with a clean, lint-free cloth.

Disposal

- Extreme care must be taken when disposing of your old appliance to avoid hazards:
 - The flammable refrigerant gas must be safely removed by a qualified service technician.
 - The thermal insulation foam in this appliance contains flammable insulation which can emit gases. Any exposed foam may be highly flammable and must be carefully treated during disposal.
- **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer, the doors and panels should be removed and the racks left in place so that children may not easily climb inside.
- Consult your local energy authority or local codes as to the best way to dispose of your old appliance.
- Your Fisher & Paykel trained and supported service technician will be able to give advice on environmentally-friendly methods of disposing of your old appliance or freezer.
- Remove all packaging and dispose of it responsibly. Recycle items that you can.

Energy Labelling and Eco-design

- This product contains light sources of energy efficiency class F.
- Information on product can be found in European Product Database (EPREL) at the following link <http://eprel.ec.europa.eu/>. You will be asked to enter the model identifier. You can identify the model information on the serial plate located on the inside or outer edge of the lower compartment.

PRODUCT OVERVIEW




RS6009SBLT1 illustrated with door panel and toe kick (not supplied).

Features

- ① Control panel
- ② Adjustable glass shelf
- ③ Beverage rack
- ④ Beverage rack dividers
- ⑤ Wine rack
- ⑥ Lighting
- ⑦ Door contacts (glass door models only)

CONTROL PANEL

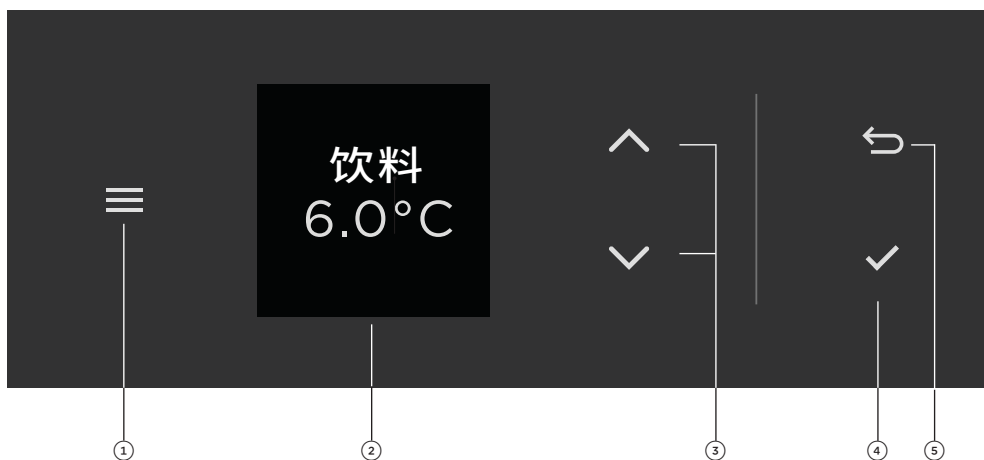

① Menu	Press to access product features and settings, or to return to standby. If the display has been locked, hold for two seconds to unlock.
② Display screen	Displays product features and settings.
③ Scroll	Press to select modes and adjust temperatures. Enables you to scroll through the menu, features and settings.
④ Select	Press to confirm and activate the selected features and settings.
⑤ Back	Press to go back to the previous menu.

MENU




TEMPERATURE SET	Select a mode or adjust the temperature. Refer to 'Modes'.
MAX COLD	Quickly cool down items that have just been added to the product. The product will temporarily drop to its coldest temperature. Available when set to Fridge or Beverage mode only.
LIGHT MODE	Adjust the lighting brightness to suit your preferences (glass door models only).
DOOR ALARM	Mutes the door alarm for 20 minutes or until the door is closed again.
DISPLAY LOCK	Lock the controls to prevent accidental use.
SABBATH MODE	For the Sabbath observant. In Sabbath Mode alarms, lights and the display will be deactivated for 80 hours. <ul style="list-style-type: none">• The lights will not turn on when you open the door.• The door alarm will not operate.• The display will not illuminate.• The display will be unresponsive.
SETTINGS	Adjust the appliance settings to suit your preferences.

USING YOUR BEVERAGE CENTRE

Select a mode and a temperature to suit the beverages you will be storing. See 'Modes' and 'Storage recommendations' for details.




Adjust the settings as needed to suit your preferences.

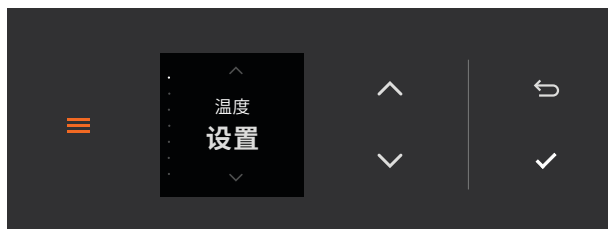Accessing the menu




1. Press  to access the menu.




2. Press  or  to scroll to the desired feature and press  to select.




3. Adjust as needed and press  to confirm.







4. Press  at any point to exit the menu.

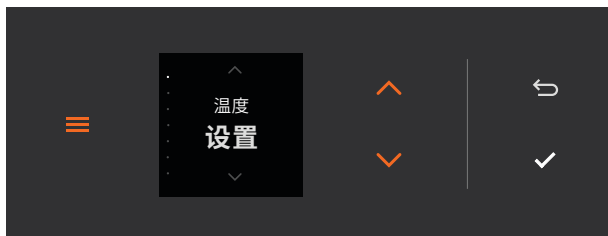


USING YOUR BEVERAGE CENTRE

Selecting and adjusting modes and temperatures






1. Press  to access Temperature SET through the menu and  to confirm, or press  or  for quick access to the modes.




2. Press  or  to scroll to desired mode, then press  to select.



3. Press  or  to adjust the temperature, and press  to confirm.



4. Press  at any point to exit the menu.

ADJUSTING YOUR BEVERAGE CENTRE

This product is designed to store a selection of beverages such as cans, and bottles of beer or wine.

For best results, take care not to overfill the product. Ensure you leave enough space for airflow.




Glass shelf

Adjust height or remove as needed. The shelf hooks into slots at the rear of the beverage centre.


To remove, lift shelf at rear and pull it out of the slot.

To refit, hook the shelf back into slots at desired height.

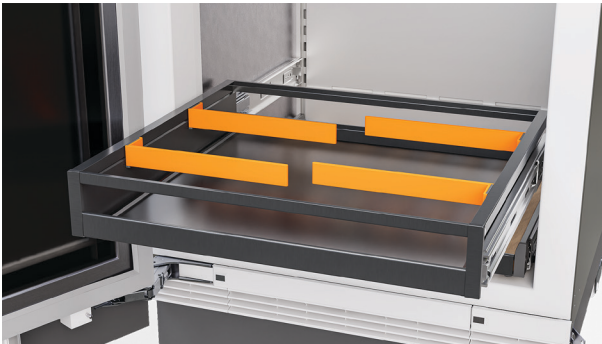

Beverage rack

Adjust shelf dividers as needed to fit different sized bottles or cans.

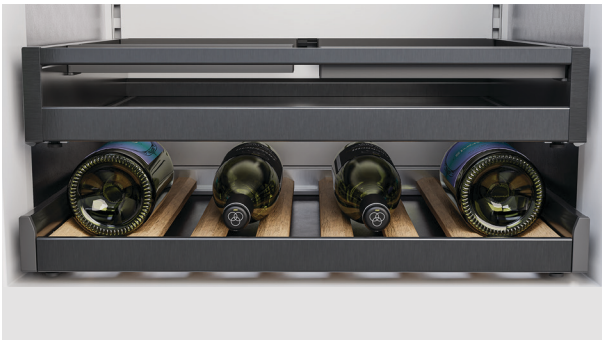

Wine rack

Fits up to 7 standard 750ml bottles. Bottles of the same size can be placed in alternating directions on each shelf.

ADJUSTING YOUR BEVERAGE CENTRE

Removing and refitting racks

The wine and beverage racks are in fixed positions, but they can be removed to make space for larger items if required.



1. Pull the rack towards you and locate the pins at the base of the corners.



2. Lift the rear of the rack to free the rear pins, then pull the rack towards you to separate the front pins from the slide support. Remove the rack.



3. To refit, push the front pins into the slide support and lower the rack until the rear pins lock into place.

MODES

Modes provide the ideal storage and serving temperatures for a variety of beverage items. You can select a range of temperatures within each mode. When you change modes, the beverage centre will default to your previously selected temperature.

BEVERAGE (6°C/43°F)	For a variety of alcoholic and non-alcoholic beverages. Wide temperature range allows you to customise serving temperature.
SPARKLING (7°C/45°F)	For short-term storage of all sparkling wines at serving temperature.
WHITE WINE (8°C/46°F)	For short-term storage of aromatic white wines and Rosé at serving temperature.
PANTRY (12°C/54°F)	For items that require cool storage below room temperature and above standard refrigerator conditions. For longer-term storage of red wines.
FRIDGE (3°C/37°F)	For short term storage of ready-to-drink items or items that require storage below 6°C.

STORAGE RECOMMENDATIONS

ITEM	RECOMMENDED TEMPERATURE
Beaujolais, Merlot	12–14°C
Burgundy, Pinot Noir, Chianti	14°C
Fortified and dessert wines	11–14°C
Gewurztraminer	12°C
Chardonnay	10–12°
Rose	10–12°
Viognier	10°C
Chablis	8–10°C
Riesling	8°C
Sauvignon Blanc, Pinot Gris	6–8°C
All varieties	6–8°C
Strong lagers, real and cask ales, Belgian Dubbels	10°C
Stouts, Porters	6–8°C
Dark lagers, American Pale Ales, IPAs	6–8°C
Wheat beers, Lambics	4–7°C
Cream and Blonde Ales, Nitro Stouts, Belgian Pale Ales, Abbey Tripels	4–7°C
Pale lagers, Pilsners	3–7°C
American Mainstream Light Lagers	2–3°C
Juice, soft drinks	2–6°C

CLEANING

Surfaces, glass shelf and beverage rack

Remove racks, then wipe interior surfaces with a damp cloth and mild detergent. Dry with a clean, lint-free cloth. Use a small brush to clean difficult to reach spots if needed.

We do not recommend using the following cleaning products as they may cause damage:

- Plastic or stainless steel scouring pads
- Abrasive, solvent, household cleaners
- Acid or alkaline cleaners
- Hand washing liquids or soap
- Stainless steel cleaners or polishes
- Laundry detergents or disinfectants

Glass door

Use only mild liquid detergent dissolved in warm water and a soft cloth. Rinse with clean water and dry with a clean, lint-free cloth.

Door seal

Use a small brush to clean around the door seal as needed.

Wooden wine rack

Clean wine spills immediately to prevent staining. Stains can be spot cleaned with a damp cloth and mild detergent.

Take care to keep the wood as dry as possible. Do not use water or cleaners for day-to-day cleaning.

Door contacts (glass door models only) and grille

Clean regularly using mild liquid detergent dissolved in warm water and a soft cloth. Rinse with clean water and dry with a clean, lint-free cloth.

TROUBLESHOOTING

General use

Why will the product not turn on?

- No power. Make sure the product is connected to the power supply and switched on at the wall.
 - Check the circuit breaker, or check if there is a power cut in your home or area. If the product still won't turn on, call Customer Care or your Authorised Service Centre.
-

Why is the display not working?

- The product is in Sabbath Mode. Press and hold  to exit this mode.
-

Why is the light not working?

- Product is not switched on. Check it is turned on at the wall or the isolating switch.
 - Light needs to be replaced. Call Customer Care or your Authorised Service Centre.
-

Why is the product beeping and displaying a code when I open the door?

- There is a fault. Record the code on the display, and call Customer Care or your Authorised Service Centre.
-

Why is the storage compartment too warm?

- Temperature setting not correct. See 'Selecting and adjusting modes and temperatures.'
 - Frequent door openings. Minimise door openings to allow temperature to stabilise.
 - Large number of beverages have been recently added. Take care not to overfill.
-

Why is the product making unfamiliar noises?

- Product is not stable or level. Check Installation guide at www.fisherpaykel.com or call Customer Care or your Authorised Service Centre.
-

Why is the product warm on the outside?

- This is normal.
-

Why is there condensation on the outside of the product?

- This is normal during periods of high humidity. Wipe dry with a lint-free cloth.
-

TROUBLESHOOTING

Why is the door not closing?

- Items in the product are preventing door from closing tightly. Rearrange items so door can close.
 - Product is not installed correctly. Check Installation guide at www.fisherpaykel.com or call Customer Care or your Authorised Service Centre.
-

Why is there condensation inside the beverage centre?

- Frequent or long door openings. Minimise door openings.
 - Door seal is leaking. Check and clean door seal. See 'Cleaning'.
 - This is normal during periods of high humidity. Wipe dry with a lint-free cloth.
 - Items preventing door from closing tightly. Rearrange items so door can close tightly.
 - Doors not aligned. Call Customer Care or your Authorised Service Centre.
-

FAULTS

If a fault occurs, there will be 4 rapid beeps and the fault will be displayed on the control panel.

Record the fault code and contact a Fisher & Paykel trained and supported service technician in order to repair the fault. You can do this by going online to fisherpaykel.com or by contacting our Customer Care Centre.

Normal appliance sounds

This beverage centre has been designed to have excellent energy ratings and cooling performance. As a result, it can produce sounds somewhat different to your old appliance.

Low frequency ticking	This is the valve that controls cooling to each compartment. This noise will only last for a few seconds at a time.
Fan air flow	This product has fans which change speed depending on demand. During cooling periods, such as after frequent door openings, fans circulate the cold air in the appliance producing some air-flow sound. This is quite normal.
Cracking or popping	This may occur when the automatic defrost function is operating.
Running water	This is the liquid refrigerant in the system and can be heard as a boiling or gurgling noise.
Hissing sound after closing the door	This is due to the pressure difference between the warm air that has entered the beverage centre, and suddenly cooled, and the outside air pressure.
Humming	This is the compressor running and is quite normal.
Other sounds	Beverage centre not stable or level. Bottles rattling on shelves.

MANUFACTURER'S WARRANTY AND SERVICE GUIDE



To access your Warranty and Service Guide

Scan the QR code with your smartphone to access your warranty and book a service, or view online at <https://www.fisherpaykel.com/cn/help-and-support/warranty-information>

Complete and keep for safe reference:

Model _____

Serial No. _____

Purchase Date _____

Purchaser _____

Dealer _____

Suburb _____

Town _____

Country _____

HAZARDOUS SUBSTANCES DECLARATION

Refrigerators

The Environmentally Friendly Use Period (EFUP) for all enclosed products and their parts are per the symbol shown here, unless otherwise marked. Certain parts may have a different EFUP (for example, battery modules) and so are marked to reflect such. The Environmentally Friendly Use Period is valid only when the product is operated under the conditions defined in the user guide.



PART NAME	HARMFUL SUBSTANCE					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr (VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl ethers (PBDE)
Control module (s)	X	O	O	O	O	O
Display(s)	X	O	O	O	O	O
Lighting module(s)	O	O	O	O	O	O
Solenoid	X	O	O	O	O	O
Inverter	X	O	O	O	O	O
Fan(s)	X	O	O	O	O	O
Humidity sensor (some models only)	O	O	O	O	O	O
Wi-Fi module (some models only)	X	O	O	O	O	O

O This hazardous substance is lower than the upper limit specified in GB/T26572.

X This hazardous substance exceeds the upper limit specified in GB/T26572.

FISHERPAYKEL.COM

© Fisher & Paykel Appliances 2024. All rights reserved.

The models shown in this guide may not be available in all markets
and are subject to change at any time.

The product specifications in this guide apply to the specific products and
models described at the date of issue. Under our policy of continuous product
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,
please go to our website or contact your local Fisher & Paykel dealer.

431769A 05.24