

**FISHER & PAYKEL**

**INTEGRATED  
BEVERAGE CENTRE**

---

RS6009SBLT1 & RS6009SBL1 models

**USER GUIDE**  
**NZ AU UK IE HK SG**



## CONTENTS

---

Safety and warnings	5
Prior to installation	9
Product overview	10
Control panel	11
Menu	12
Using your beverage centre	13
Adjusting your beverage centre	15
Modes	17
Light modes (glass door models only)	18
Storage recommendations	19
Wi-Fi connection	20
Cleaning	21
Troubleshooting	22
Faults	24
European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE)	25
Customer care	27

---

### Registration

To register your product visit our website: [fisherpaykel.com/register](https://fisherpaykel.com/register)



**⚠ WARNING!**



**Electric Shock Hazard**

Failure to do so can result in death, electric shock, fire or injury to persons.

- Read and follow the safety and warnings outlined in this user guide before operating this appliance.

**⚠ WARNING!**



**Tip Hazard**

- This product may tip until it is fully installed. Keep children away and take care. Failure to follow this advice may result in injury.
- This appliance is top-heavy and must be secured to prevent the possibility of tipping forward.

**To ensure that the appliance is stable under all loading conditions:**

- The anti-tip bracket and fittings supplied must be installed by a professional installer according to the installation steps in this guide.
- This product may tip when the anti-tip bracket is unscrewed. Refer to installation instructions to safely uninstall the product.

**⚠ WARNING!**



**This appliance contains flammable refrigerant isobutane (R600a).**

## SAFETY AND WARNINGS

---

### READ AND SAVE THIS GUIDE

#### **WARNING!**

Read Safety Guide. Failure to follow all guides and rules could cause personal injury or property damage. When using this appliance, always exercise basic safety precautions including the following:

Use this appliance only for the intended purpose as described in the user guide and installation guide of this appliance.

#### **General**

- This appliance is designed for use in a normal domestic (residential) environment.
- Children should be supervised to ensure that they do not play with the appliance.
- Children aged 3 to 8 years may load and unload this appliance under supervision.
- Cleaning and user maintenance shall not be undertaken by children without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- The manufacturer's installation instructions for appliance and cabinetry ventilation must be followed when installing the appliance.
- To avoid hazard due to instability of the appliance, it must be fixed in accordance with installation guide.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit. In case of damage to the refrigerant circuit, ventilate the area by opening all windows.
- It is hazardous for anyone other than a Fisher & Paykel trained and supported service technician to service this appliance.
- It is hazardous for anyone other than an Authorised Service Person to service this appliance. In Queensland - the authorized Service Person MUST hold a Gas Work Authorisation for hydrocarbon refrigerants, to carry out Servicing or repairs which involve the removal of covers.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Never store volatile or flammable materials in your appliance as they may explode.
- Opening the door for long periods of time can cause a significant increase of the temperature in the compartments of the appliance.

#### **Installation**

- Ensure that the appliance is secured to prevent tipping forward. Tipping of appliance can lead to serious injury or death.

#### **Electrical**

- Do not plug in any other appliance at the same power point as your appliance or use extension cords or double adapters.
- When moving your appliance away from the wall, be careful not to roll over or damage the power cord.

## SAFETY AND WARNINGS

---

- When positioning the appliance, ensure the power cord is not trapped or damaged. If the power cord is damaged, it must only be replaced by your Fisher & Paykel trained and supported service technician.
- Do not operate electrical equipment or any other equipment that may produce arcs, sparks or flames in the area. Contact your Fisher & Paykel trained and supported service technician immediately to arrange for the appliance to be repaired.
- Do not use electrical appliances inside the storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

### Temperature control

- This refrigerating appliance is intended to be used at ambient temperatures ranging from 16 °C to 43 °C. The appliance performance may be compromised when operating outside of the temperature range.
- Once you turn on your appliance for the first time, the cooling system will automatically cool all compartments to their set temperatures. This will take between 2 – 3 hours.
- The control panel enables you to change and control the temperatures of the compartments accurately and independently regardless of the temperature or humidity of the surroundings whether it is summer or winter.
- We recommend checking the operation of your appliance once every 4 hours for the first 24 hours.
- If at any time you notice that the appliance is not cooling properly, call your installer or Fisher & Paykel trained and supported service technician to verify if the unit is operating properly.

### Servicing

- All electrical repairs must be carried out by an adequately trained service technician or qualified electrician.
- Electrical shock hazard. Assume all parts are live.
- Disconnect supply before servicing and installation.
- The LED light cannot be serviced by the user. Contact your Fisher & Paykel Dealer or Fisher & Paykel trained and supported service technician.
- For spare parts, please contact Fisher & Paykel Customer Care. Spare parts are available for all Fisher & Paykel appliances for a minimum period of 10 years from the date of manufacture.

### **IMPORTANT!**

Your appliance is designed to operate for many years without the need for service checks. However, if your appliance is malfunctioning, have it attended to by your Fisher & Paykel trained and supported service technician as soon as possible.

### Cleaning

- If the appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.
- Use only soap-based cleaning products. Many commercially available cleaning products contain solvents that may degrade the plastic components of your refrigerator and cause them to crack.
- Avoid using anti-bacterial cleaning products on either the interior or exterior of the cabinet as they may cause rusting of metal components and cracking of plastic components.

## SAFETY AND WARNINGS

---

- Regularly clean accessible draining systems and surfaces.
- **GLASS DOOR:** Use only mild liquid detergent dissolved in warm water and a soft cloth. Rinse with clean water and dry with a clean, lint-free cloth.

### Disposal

- Extreme care must be taken when disposing of your old appliance to avoid hazards:
  - The flammable refrigerant gas must be safely removed by a qualified service technician.
  - The thermal insulation foam in this appliance contains flammable insulation which can emit gases. Any exposed foam may be highly flammable and must be carefully treated during disposal.
- **WARNING:** Risk of child entrapment. Before you throw away your old refrigerator or freezer, the doors and panels should be removed and the racks left in place so that children may not easily climb inside.
- Consult your local energy authority or local codes as to the best way to dispose of your old appliance.
- Your Fisher & Paykel trained and supported service technician will be able to give advice on environmentally-friendly methods of disposing of your old appliance or freezer.
- Remove all packaging and dispose of it responsibly. Recycle items that you can.

### Energy Labelling and Eco-design

- This product contains light sources of energy efficiency class F.
- Information on product can be found in European Product Database (EPREL) at the following link <http://eprel.ec.europa.eu/>. You will be asked to enter the model identifier. You can identify the model information on the serial plate located on the inside or outer edge of the lower compartment.



## PRIOR TO INSTALLATION

---

- The anti-tip bracket and fittings supplied must be fitted to the wall of the finished enclosure to withstand a 100kg load.
- Your appliance may include front and rear rollers designed for moving the appliance forward and backward. Do not move the appliance sideways as this may damage the rollers or the floor covering / surface.
- The appliance must be installed by a qualified installer, or Fisher & Paykel trained and supported service technician to avoid faulty electrical connection and water leaks.
- All connections for water, electrical power and grounding must comply with local codes and ordinances and be made by licensed personnel when required.
- Avoid installation of the appliance/s under a ground fault circuit interrupter (GFCI).
- Ensure the appliance is installed properly. Improper installation that results in appliance failure is not covered under the appliance warranty.

### Check the cabinetry

- Check the dimensions – height, width, depth, floor level, finished alcove returns.
- Ensure that the ventilation openings in the cabinetry are clear of obstruction.
- For integrated installation, a finished return of solid material is required across the top and sides of the new or existing alcove.
- Refer to the 'Product and Cavity Dimensions' prior to installation of the appliance.

### Check the power supply

- Ensure that there is a separate power outlet for the appliance.
- Avoid sharing the power point with other appliances to prevent the appliance from accidentally switching off.
- For power requirements, refer to the information on the serial plate. This is located at the front right-hand side of the drawer when open.
- Ensure your appliance is properly grounded (earthed).
- Connect the appliance to electrical supply (220-240V, 50 Hz) with fitted plug and lead.
- We recommend to use an isolating switch that is easily accessible to the user after the appliance is installed.
- Follow all local codes and ordinances when installing this appliance.

### Insert hinge limiting pin

- Before opening the doors, ensure that the appliance is stable.
- Follow these steps to avoid risks that can cause serious injury or death.

For 90° door swing, a hinge limiting pin is supplied with your appliance. This pin fits in the boreholes of the top hinge

- ① Open door to 90°.
- ② Insert the hinge limiting pin vertically into the bore hole. Tap the pin gently if it does not slide smoothly.

**All product information, including product user guides and installation guides, can be sourced and downloaded from [www.fisherpaykel.com](http://www.fisherpaykel.com)**

## PRODUCT OVERVIEW

---



RS6009SBLT1 illustrated with door panel and toe kick (not supplied).


---

### Features

---


- |                          |   |
|--------------------------|---|
| ① Control panel          | ⑤ Wine rack                             |
| ② Adjustable glass shelf | ⑥ Lighting                              |
| ③ Beverage rack          | ⑦ Door contacts (glass door model only) |
| ④ Beverage rack dividers |   |

## CONTROL PANEL

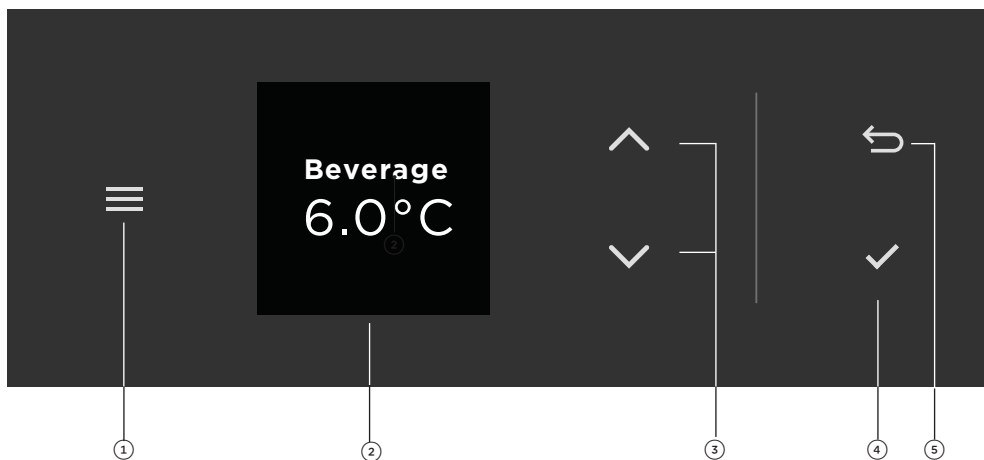

① <b>Menu</b>	Press to access product features and settings, or to return to standby. If the display has been locked, hold for two seconds to unlock.
② <b>Display screen</b>	Displays product features and settings.
③ <b>Scroll</b>	Press to select modes and adjust temperatures. Enables you to scroll through the menu, features and settings.
④ <b>Select</b>	Press to confirm and activate the selected features and settings.
⑤ <b>Back</b>	Press to go back to the previous menu.

## MENU

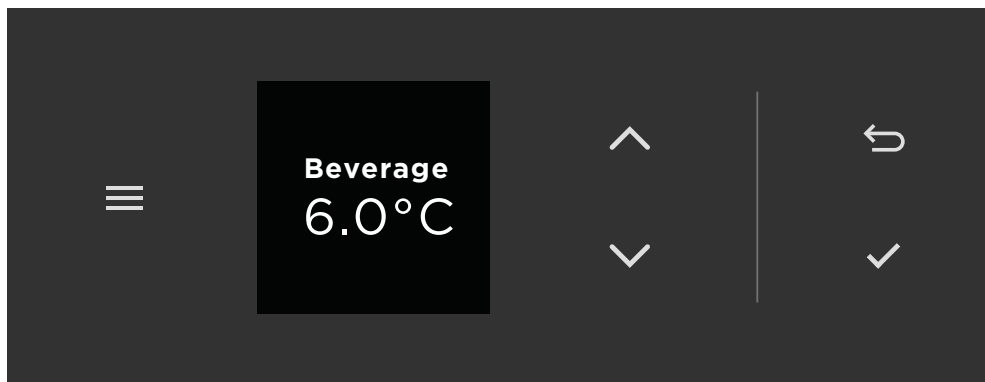

<b>TEMPERATURE SET</b>	Select a mode or adjust the temperature. Refer to 'Modes'.
<b>MAX COLD</b>	Quickly cool down items that have just been added to the product. The product will temporarily drop to its coldest temperature. Available when set to Fridge or Beverage mode only.
<b>LIGHT MODES</b>	Adjust the lighting brightness to suit your preferences (glass door models only). Refer to 'Light modes'.
<b>DOOR ALARM</b>	Mutes the door alarm for 20 minutes or until the door is closed again.
<b>DISPLAY LOCK</b>	Lock the controls to prevent accidental use.
<b>SABBATH MODE</b>	For the Sabbath observant. In Sabbath Mode alarms, lights and the display will be deactivated for 80 hours. <ul style="list-style-type: none"><li>• The lights will not turn on when you open the door.</li><li>• The door alarm will not operate.</li><li>• The display will not illuminate.</li><li>• The display will be unresponsive.</li></ul>
<b>SETTINGS</b>	Adjust the appliance settings to suit your preferences or set up a Wi-Fi connection. Refer to 'Wi-Fi connection'.


## USING YOUR BEVERAGE CENTRE

---


Select a mode and a temperature to suit the beverages you will be storing. See 'Modes' and 'Storage recommendations' for details.




Adjust the settings as needed to suit your preferences.

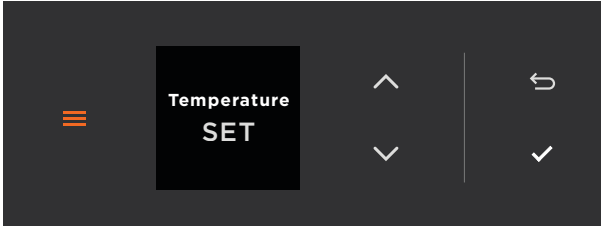
### Accessing the menu

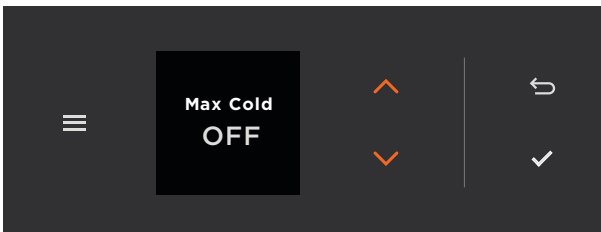


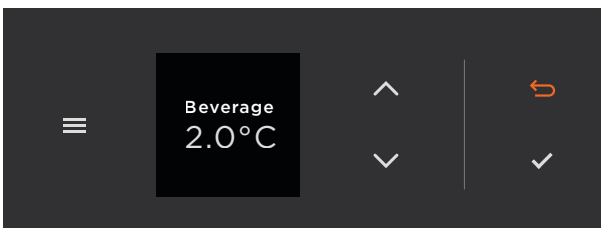
1. Press  to access the menu.




2. Press  or  to scroll to the desired feature and press  to select.

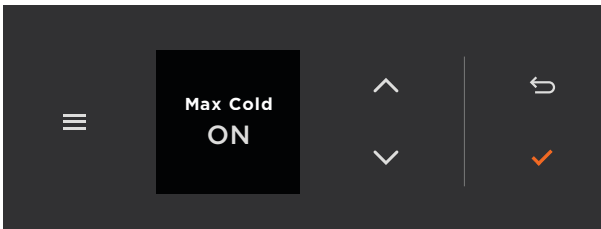


3. Adjust as needed and press  to confirm.








4. Press  at any point to exit the menu.

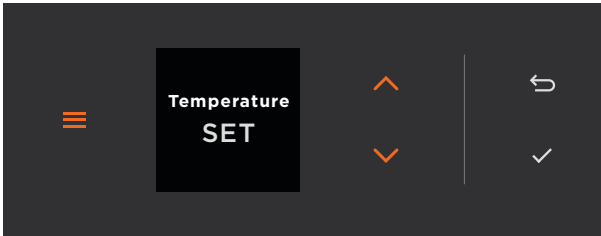


## USING YOUR BEVERAGE CENTRE


### Selecting and adjusting modes and temperatures



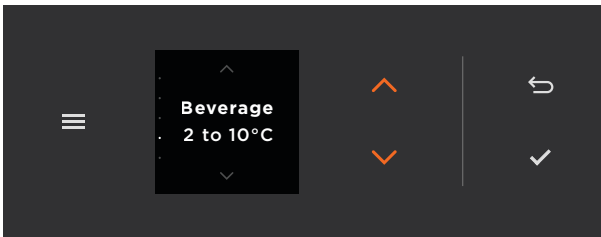


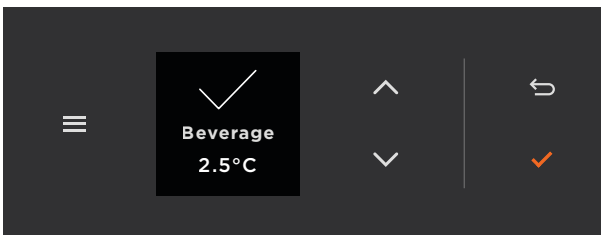
1. Press  to access Temperature SET through the menu and  to confirm, or press  or  for quick access to the modes.

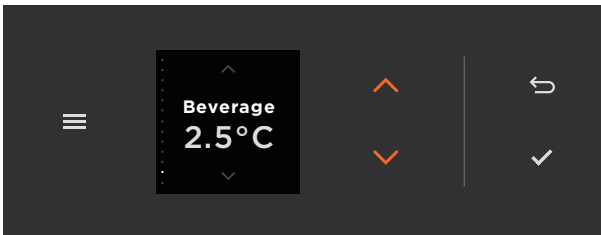


2. Press  or  to scroll to desired mode, then press  to select.



3. Press  or  to adjust the temperature, and press  to confirm.



4. Press  at any point to exit the menu.

## ADJUSTING YOUR BEVERAGE CENTRE

This product is designed to store a selection of beverages such as cans, and bottles of beer or wine.

For best results, take care not to overfill the product. Ensure you leave enough space for airflow.




### Glass shelf

Adjust height or remove as needed. The shelf hooks into slots at the rear of the beverage centre.

To remove, lift shelf at rear and pull it out of the slot.

To refit, hook the shelf back into slots at desired height.

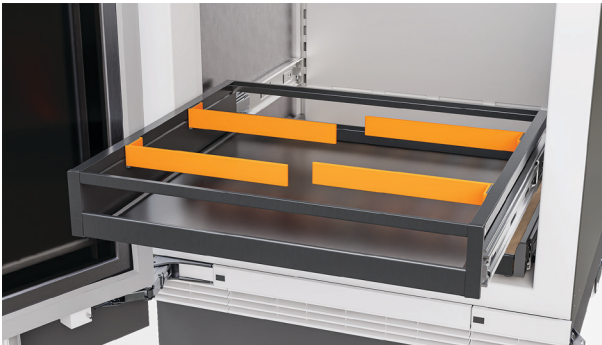

### Beverage rack

Adjust shelf dividers as needed to fit different sized bottles or cans.



### Wine rack

Fits up to 7 standard 750ml bottles. Bottles of the same size can be placed in alternating directions on each shelf.

## ADJUSTING YOUR BEVERAGE CENTRE

### Removing and refitting racks

The wine and beverage racks are in fixed positions, but they can be removed to make space for larger items if required.



1. Pull the rack towards you and locate the pins at the base of the corners.



2. Lift the rear of the rack to free the rear pins, then pull the rack towards you to separate the front pins from the slide support. Remove the rack.



3. To refit, push the front pins into the slide support and lower the rack until the rear pins lock into place.



## MODES

---

Modes provide the ideal storage and serving temperatures for a variety of beverage items. You can select a range of temperatures within each mode. When you change modes, the beverage centre will default to your previously selected temperature.

---

<b>BEVERAGE</b> (6°C/43°F)	For a variety of alcoholic and non-alcoholic beverages. Wide temperature range allows you to customise serving temperature.
<b>SPARKLING</b> (7°C/45°F)	For short-term storage of all sparkling wines at serving temperature.
<b>WHITE WINE</b> (8°C/46°F)	For short-term storage of aromatic white wines and Rosé at serving temperature.
<b>PANTRY</b> (12°C/54°F)	For items that require cool storage below room temperature and above standard refrigerator conditions. For longer-term storage of red wines.
<b>FRIDGE</b> (3°C/37°F)	For short term storage of ready-to-drink items or items that require storage below 6°C.

---

## LIGHT MODES (GLASS DOOR MODELS ONLY)

---

Light modes let you select the illumination level of beverages and the surrounding environment. Light mode will default to **LOW** after 3 hours to ensure the best beverage care.

---

### LIGHT MODE

---

<b>OFF</b>	Select <b>OFF</b> to turn off all compartment lights. Best mode for long-term storage.
<b>LOW</b>	Dimmest setting available. Softly illuminates the interior of the beverage centre while allowing it to blend into the surrounding environment.
<b>MEDIUM</b>	Medium illumination subtly highlights beverages.
<b>HIGH</b>	Turns all compartment lights to full brightness to showcase your beverage centre.

---

## STORAGE RECOMMENDATIONS

ITEM	RECOMMENDED TEMPERATURE
Beaujolais, Merlot	12–14°C
Burgundy, Pinot Noir, Chianti	14°C
Fortified and dessert wines	11–14°C
Gewurztraminer	12°C
Chardonnay	10–12°
Rose	10–12°
Viognier	10°C
Chablis	8–10°C
Riesling	8°C
Sauvignon Blanc, Pinot Gris	6–8°C
All varieties	6–8°C
Strong lagers, real and cask ales, Belgian Dubbels	10°C
Stouts, Porters	6–8°C
Dark lagers, American Pale Ales, IPAs	6–8°C
Wheat beers, Lambics	4–7°C
Cream and Blonde Ales, Nitro Stouts, Belgian Pale Ales, Abbey Tripels	4–7°C
Pale lagers, Pilsners	3–7°C
American Mainstream Light Lagers	2–3°C
Juice, soft drinks	2–6°C

## WI-FI CONNECTION

Your appliance may be connected to your home wireless network and operated remotely using the app.


### Getting started





- Ensure your home Wi-Fi network and Bluetooth on your mobile device are turned on.
- You will be given step-by-step guidance on mobile device.
- It may take up to 10 minutes to connect your appliance.

### On your mobile device:

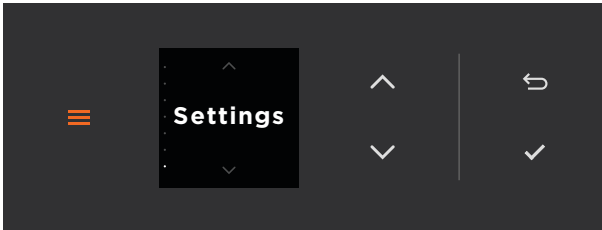


- ① Download the app from [www.fisherpaykel.com/connect](http://www.fisherpaykel.com/connect)
- ② Register and create an account.
- ③ Add your appliance and set up the Wi-Fi connection.


### Connecting to Wi-Fi



1. Press  to access the menu, then  or  to scroll to **SETTINGS**. Press  to select.



2. Press  or  to scroll to **WI-FI SETUP**. Press  to select.

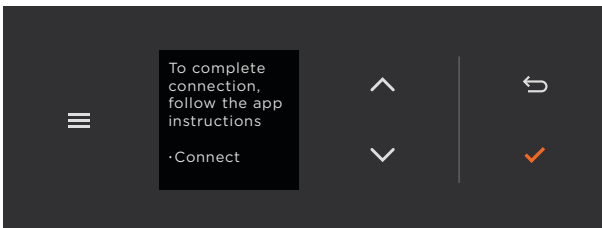

3. Follow the prompts on the display and in the app to complete setup.

## CLEANING

---

### **Surfaces, glass shelf and beverage rack**

Remove racks, then wipe interior surfaces with a damp cloth and mild detergent. Dry with a clean, lint-free cloth. Use a small brush to clean difficult to reach spots if needed.

We do not recommend using the following cleaning products as they may cause damage:

- Plastic or stainless steel scouring pads
- Abrasive, solvent, household cleaners
- Acid or alkaline cleaners
- Hand washing liquids or soap
- Stainless steel cleaners or polishes
- Laundry detergents or disinfectants

### **Glass door**

Use only mild liquid detergent dissolved in warm water and a soft cloth. Rinse with clean water and dry with a clean, lint-free cloth.

### **Door seal**

Use a small brush to clean around the door seal as needed.

### **Wooden wine rack**

Clean wine spills immediately to prevent staining. Stains can be spot cleaned with a damp cloth and mild detergent.

Take care to keep the wood as dry as possible. Do not use water or cleaners for day-to-day cleaning.

### **Door contacts (glass door models only) and grille**

Clean regularly using mild liquid detergent dissolved in warm water and a soft cloth. Rinse with clean water and dry with a clean, lint-free cloth.

# TROUBLESHOOTING

---

## General use

---

### Why will the product not turn on?

- No power. Make sure the product is connected to the power supply and switched on at the wall.
  - Check the circuit breaker, or check if there is a power cut in your home or area. If the product still won't turn on, call Customer Care or your Authorised Service Centre.
- 

### Why is the display not working?

- The product may be in Sabbath Mode. Press and hold  to exit this mode.
- 

### Why is the light not working?

- Light mode is switched off. (Glass door models only.) See 'Accessing the menu' and 'Light modes'.
  - Product is not switched on. Check it is turned on at the wall or the isolating switch.
  - Light needs to be replaced. Call Customer Care or your Authorised Service Centre.
- 

### Why is the product beeping and displaying a code when I open the door?

- There is a fault. Record the code on the display, and call Customer Care or your Authorised Service Centre.
- 

### Why is the storage compartment too warm?

- Temperature setting not correct. See 'Selecting and adjusting modes and temperatures.'
  - Frequent door openings. Minimise door openings to allow temperature to stabilise.
  - Large number of beverages have been recently added. Take care not to overfill.
- 

### Why is the product making unfamiliar noises?

- Product is not stable or level. Check Installation guide at [www.fisherpaykel.com](http://www.fisherpaykel.com) or call Customer Care or your Authorised Service Centre.
- 

### Why is the product warm on the outside?

- This is normal.
- 

### Why is there condensation on the outside of the product?

- This is normal during periods of high humidity. Wipe dry with a lint-free cloth.
-

## TROUBLESHOOTING

---

---

### **Why is the door not closing?**

- Items in the product are preventing door from closing tightly. Rearrange items so door can close.
  - Product is not installed correctly. Check Installation guide at [www.fisherpaykel.com](http://www.fisherpaykel.com) or call Customer Care or your Authorised Service Centre.
- 

### **Why is there condensation inside the product?**

- Frequent or long door openings. Minimise door openings.
  - Door seal is leaking. Check and clean door seal. See 'Cleaning.'
  - This is normal during periods of high humidity. Wipe dry with a lint-free cloth.
  - Items preventing door from closing tightly. Rearrange items so door can close tightly.
  - Doors not aligned. Call Customer Care or your Authorised Service Centre.
-

## FAULTS

---

If a fault occurs, there will be 4 rapid beeps and the fault will be displayed on the control panel.

Record the fault code and contact a Fisher & Paykel trained and supported service technician in order to repair the fault. You can do this by going online to [fisherpaykel.com](http://fisherpaykel.com) or by contacting our Customer Care Centre.

### Normal appliance sounds

This beverage centre has been designed to have excellent energy ratings and cooling performance. As a result, it can produce sounds somewhat different to your old appliance.

---

<b>Low frequency ticking</b>	This is the valve that controls cooling to each compartment. This noise will only last for a few seconds at a time.
<b>Fan air flow</b>	This product has fans which change speed depending on demand. During cooling periods, such as after frequent door openings, fans circulate the cold air in the appliance producing some air-flow sound. This is quite normal.
<b>Cracking or popping</b>	This may occur when the automatic defrost function is operating.
<b>Running water</b>	This is the liquid refrigerant in the system and can be heard as a boiling or gurgling noise.
<b>Hissing sound after closing the door</b>	This is due to the pressure difference between the warm air that has entered the product, and suddenly cooled, and the outside air pressure.
<b>Humming</b>	This is the compressor running and is quite normal.
<b>Other sounds</b>	Product is not stable or level. Bottles rattling on shelves.


---



## EUROPEAN DIRECTIVE 2012/19/EU ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

---

**EU** This appliance is marked according to the European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate handling of this product.

The symbol  marked on the serial plate, or on the documents accompanying the product, indicates that this appliance cannot be treated as household waste. It shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal of the appliance shall be carried out in accordance with the local environment regulations for waste disposal and ensure the refrigerant circuit is not damaged.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or your Fisher & Paykel retailer/dealer from whom you purchased this product.



### **To access your Warranty and Service Guide**

Scan the QR code with your smartphone to access your warranty and book a service, refer to your separate warranty and service book or view online at:

#### **New Zealand**

<https://www.fisherpaykel.com/nz/help-and-support/warranty-information>

#### **Australia**

<https://www.fisherpaykel.com/au/help-and-support/warranty-information>

#### **United Kingdom**

<https://www.fisherpaykel.com/uk/help-and-support/warranty-information>

#### **Ireland**

<https://www.fisherpaykel.com/ie/help-and-support/warranty-information>

#### **Europe**

<https://www.fisherpaykel.com/eu/help-and-support/warranty-information>

#### **Singapore**

<https://www.fisherpaykel.com/sg/help-and-support/warranty-information>

#### **Hong Kong**

<https://www.fisherpaykel.com/asia/help-and-support/warranty-information>

This product has been designed for use in a domestic (residential) environment. This product is not designed for any commercial use. Any commercial use by the customer will affect this products Manufacturer's Warranty.

For spare parts, please contact Fisher & Paykel Customer Care. Spare parts are available for all Fisher & Paykel products for a minimum period of 10 years from the date of manufacture.

## CUSTOMER CARE

---

### **Before you call for service or assistance**

Check the things you can do yourself. Refer to your User guide and check:

- ① Your product is correctly installed.
- ② You are familiar with its normal operation.
- ③ You have read the 'Before you call for service or assistance', 'Faults' and 'Troubleshooting'.

If, after checking these points, you still need assistance or parts, please refer to your nearest Paykel trained and supported service technician, Customer Care, or contact us through our website [fisherpaykel.com](http://fisherpaykel.com).

### **In NZ if you need assistance**

Call the Fisher & Paykel Customer Care Centre and talk to one of our Customer Care Consultants.

**Toll Free:** 0800 372 273

**Website:** [fisherpaykel.com](http://fisherpaykel.com)

#### **Postal address:**

Fisher & Paykel Appliances New Zealand  
PO BOX 58546  
Botany  
Auckland

### **In Australia if you need assistance**

Call the Fisher & Paykel Customer Care Centre and talk to one of our Customer Care Consultants.

**Toll Free:** 1300 650 590

**Website:** [fisherpaykel.com](http://fisherpaykel.com)

#### **Postal address:**

Fisher & Paykel Appliances Australia  
Level 1  
1 Eden Park Drive  
Macquarie Park  
NSW 2113

## CUSTOMER CARE

---

### **In UK or Europe if you need assistance**

Call the Fisher & Paykel Customer Care Centre and talk to one of our Customer Care Consultants.

**Toll Free:** 08000 886 605

**Website:** [fisherpaykel.com](http://fisherpaykel.com)

**Postal address:**

Fisher & Paykel Appliances Ltd  
420 Cob Drive  
Swan Valley  
Northampton NN4 9BB

### **In Ireland if you need assistance**

Call the Fisher & Paykel Customer Care Centre and talk to one of our Customer Care Consultants.

**Toll Free:** 1800 625174 or 01 807 7960

**Website:** [fisherpaykel.com](http://fisherpaykel.com)

**Postal address:**

Fisher & Paykel Appliances Ltd,  
Unit 2D Corporate Park  
Swords Dublin

### **In Asia if you need assistance**

Call the Fisher & Paykel Customer Care Centre and talk to one of our Customer Care Consultants.

**Phone:** +65 6741 0777

**Website:** [fisherpaykel.com](http://fisherpaykel.com)

**Email:** [sg.customercare@fisherpaykel.com](mailto:sg.customercare@fisherpaykel.com)

**Postal address:**

Fisher & Paykel Appliances  
51 Kampong Bugis  
#01-05 Kallang Riverside Condominium  
Singapore 338986

## CUSTOMER CARE

---

### If you need service

Fisher & Paykel has a network of Fisher & Paykel trained and supported service technicians that can carry out any service necessary on your appliance. Our Customer Care Centre can recommend a Fisher & Paykel trained and supported service technician in your area, or you can book one online at [fisherpaykel.com](http://fisherpaykel.com).

If you call, write or contact us via our website please provide:  
your name and address, model number, serial number, date of purchase and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

**Product details can be found inside the product at the bottom right.**

### Complete and keep for safe reference:

Model \_\_\_\_\_  
Serial No. \_\_\_\_\_  
Purchase Date \_\_\_\_\_  
Purchaser \_\_\_\_\_  
Dealer \_\_\_\_\_  
Suburb \_\_\_\_\_  
Town \_\_\_\_\_  
Country \_\_\_\_\_

**FISHERPAYKEL.COM**

© Fisher & Paykel Appliances 2024. All rights reserved.

The models shown in this guide may not be available in all markets  
and are subject to change at any time.

The product specifications in this guide apply to the specific products and  
models described at the date of issue. Under our policy of continuous product  
improvement, these specifications may change at any time.

For current details about model and specification availability in your country,  
please go to our website or contact your local Fisher & Paykel dealer.

**431766A 05.24**